

Connector	Function
J1-01	desersippien motor A high
J1-02	Valve EGR
J1-03	Fault light
J1-04	2 cylinder oxygen sensor
heating	
J1-05	
J1-06	Tachometer
J1-07	CAN line signal low
J1-08	CAN line signal high
J1-09	Power (system) ground
J1-10	Ignition coil drive B (2
cylinde	7)
J1-11	Idle stepper motor A low
J1-12	Idle stepper motor B high
J1-13	Idle stepper motor B low
J1-14	
J1-15	2 cylinder oxygen sensor
signal	
J1-16	Reverse speed limit
J1-17	
J1-18	
J2-01	Ignition coil drive A (1
cylinde	;)
J2-02	Power (system) ground
J2-03	KW2000
J2-04	23 tooth signal high
J2-05	Nozzle A
J2-06	Nozzle B
J2-07	1 cylinder oxygen sensor
heating	
J2-08	Inlet temperature signal
J2-09	Oil pump control signal
J2-10	5V reference voltage ground
J2-11	Inlet pressure signal
J2-12	Throttle position signal
J2-13	23 tooth signal low

J2-14 Coolant temperature signal

J2-15 Ignition power

J2-16 5V reference voltage

J2-17 1 cylinder oxygen sensor signal (Tyco)

J2-18 Battery power

J1 (Grey) J2 (Black)
1488533-6 1488533-5